

How to use the list

- Software** - The latest version of software is listed for each OS.  
 - Software in the list is installable on a multilingual OS, although they have been evaluated on an English OS.

- OS and Products** - OS or products that are not in the list are either not supported or have not been subjected to the performance test.  
 - Some of the products in the list may not be available in your local area. For more information, contact the dealer in your area.

	3.01aE	3.04E	4.12E	4.12SC	4.12TC	2.20E SP9	2.30E SP8	2.40E	2.67E R4	1.11.12E	1.11.13E	1.8.2L	1.9.4L	1.11.13L	1.62W	1.11.13W	1.2.0.0	1.00	3.06E	1.04 EMEA	1.1.0.0	
<b>Windows® 95</b>						Standard	SE	SE														
<b>Windows® 98</b>																						
<b>Windows NT® 4.0</b>	SP6						SP6	SP6	SP6													
<b>Windows® 2000</b>	SP4	SP4					SP3	SP4	SP4													
<b>Windows® 2000 Server</b>															SP4	SP4				SP4	SP4	SP4
<b>Windows® XP 32bit</b>	SP1	SP2	SP3	SP3	SP3	SP1	SP1	SP1	SP3	SP3	SP3											
<b>Windows® XP 64bit</b>																						
<b>Windows® XP Embedded 32bit</b>	SP1	SP2	SP2	SP2	SP2																	
<b>Windows® Embedded for Point of Service</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes											
<b>Windows® Embedded POSReady 2009 32bit</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes											
<b>Windows® Embedded Standard 2009 32bit</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes					Yes						Yes
<b>Windows® Embedded Enterprise 32/64 bit</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes											
<b>Windows® Server 2003 32bit</b>		R2 SP2	R2 SP2	R2 SP2	R2 SP2																	
<b>Windows® Server 2003 64bit</b>		R2 SP2	R2 SP2	R2 SP2	R2 SP2																	
<b>Windows® Server 2008 32bit</b>		SP2	SP2	SP2	SP2				SP2	SP2	SP2										SP2	SP2
<b>Windows® Server 2008 64bit</b>		SP2	SP2	SP2	SP2				SP2	SP2	SP2										SP2	SP2
<b>Windows® Server 2008 R2</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes										Yes	Yes
<b>Windows® Vista 32bit</b>		SP2	SP2	SP2	SP2				SP2	SP2	SP2										SP2	SP2
<b>Windows® Vista 64bit</b>		SP2	SP2	SP2	SP2				SP2	SP2	SP2										SP2	SP2
<b>Windows® 7 32 bit</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes						Yes				Yes	Yes
<b>Windows® 7 64 bit</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes						Yes				Yes	Yes
<b>Red Hat Linux</b>												9	9									
<b>Red Hat Enterprise Linux</b>																						
<b>Suse Linux Enterprise</b>																						
<b>Open Suse</b>																						
<b>Ubuntu</b>																						
<b>Mac OS Intel 32bit</b>																						
<b>Mac OS Intel 64bit</b>																						
<b>Mac OS PowerPC 32bit</b>																						
<b>Mac OS PowerPC 64bit</b>																						
<b>TM-H5000</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-H5000II</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-H6000</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-H6000II</b>		Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-H6000III</b>		Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-J2000 / J2100</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-J7000 / J7100</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-J7500 / J7500</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-30000</b>						Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-39000 / J9100</b>						Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-C100</b>		Yes	Yes																			
<b>TM-C3400</b>																						Yes
<b>TM-T260F</b>																						
<b>TM-T285</b>																						
<b>TM-T20</b>			Yes						Yes	Yes	Yes			Yes			Yes	Yes	Yes	Yes	Yes	
<b>TM-T58</b>		Yes	Yes	Yes	Yes																	
<b>TM-T70</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes			Yes	Yes							
<b>TM-T80</b>																						
<b>TM-T81F</b>																						
<b>TM-T85</b>																						
<b>TM-T86F</b>																						
<b>TM-T88</b>																						
<b>TM-T88II</b>		Yes				Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-T88III</b>		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes					Yes	
<b>TM-T88IV</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes			Yes	Yes							
<b>TM-T88IV ReStick</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes			Yes	Yes							
<b>TM-T88V</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes			Yes	Yes						Yes	Yes
<b>TM-T90</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-L600</b>																						
<b>TM-L601II</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-L90</b>		Yes	Yes		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-L90 Peeler</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-P60</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-P60 Peeler</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U120</b>		Yes	Yes	Yes	Yes				Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U120II</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U200</b>		Yes				Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U210</b>		Yes				Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U220</b>		Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U230</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U295</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U300</b>						Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U325</b>			Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U375</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U590</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U675</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U925</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>TM-U950</b>		Yes	Yes			Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes						
<b>RP-U420</b>						Yes																